LOAN DOCUMENT

DTIC ACCESSION NUMBER DATE D	PHOTOGRAPH THIS SHEET INVENTORY AND DOCUMENT IDENTIFICATION DOC 90 A
	Approved for Public Release Distribution Unlimited
 / 	DISTRIBUTION STATEMENT I
ACCESSION FOR NTIS GRAM DTIC TRAC UNANNOUNCED JUSTIFICATION BY DISTRIBUTION/ AVAILABILITY CODES DISTRIBUTION AVAILABILITY AND/OR SPECIAL DISTRIBUTION STAMP	DATE ACCESSIONED A R R
	DATE RETURNED
20001130 04	
DATE RECEIVED IN DTIC	REGISTERED OR CERTIFIED NUMBER
PHOTOGRAPH TI	HIS SHEET AND RETURN TO DTIC-FDAC
DTIC ROM 70A	DOCUMENT PROCESSING SHEET PREVIOUS EDITIONS MAY BE USED UNTIL

Operations and Maintenance Manual for Full-Scale Bioventing System at Facility 6454



Vandenberg Air Force Base California

Prepared For

Air Force Center for Environmental Excellence Technology Transfer Division Brooks Air Force Base San Antonio, Texas

and

30 CES/CEVCR Vandenberg Air Force Base California

December 1996



100 West Walnut Street • Pasadena, California 91124

AQM01-01-0361

	REQUEST FOR SCIENTIFIC AND	TECHNICAL REPO	RTS							
Ti	AFCEE Collection									
•			. :							
Ļ	ALL MANAGEMENT AND A STATE OF THE STATE OF T									
I	Report Availability (Please check one box)	2a. Number of Copies Forwarded	2b. Forwarding Date							
IX	This report is available. Complete sections 2a - 2f. This report is not available. Complete section 3.	<u>.</u>	0 (-							
20	. Distribution Statement (Please check ONE DOX)	1 each	July/2000							
Dal	Directive 5230.24, "Distribution Statements on Technical Documents.	* 18 Mar 87. contains sever	distribution statements as							
des	cribed briefly below. Technical documents MUST be assigned a distrib	ution statement.								
×	DISTRIBUTION STATEMENT A: Approved for public rela	ase. Distribution is u	nlimited.							
	DISTRIBUTION STATEMENT B: Distribution authorized	to U.S. Government A	gencies only.							
	DISTRIBUTION STATEMENT C: Distribution authorized contractors.	to U.S. Government A	Agencies and their							
	DISTRIBUTION STATEMENT D: Distribution authorized DoD contractors only.	to U.S. Department of	Defense (DoD) and U.S							
	DISTRIBUTION STATEMENT E: Distribution authorized components only.	to U.S. Department of	Dafansa (DoD)							
	indicated below or by higher authority.									
	DISTRIBUTION STATEMENT X: Distribution authorized to individuals or enterprises eligible to obtain export-controlled Directive 5230.25, Withholding of Unclassified Technical I	ed technical data in ac	nardance with Dan							
2d.	Reason For the Above Distribution Statement (in accord	ance with DoD Directive 5.	230.24)							
2ė.	Controlling Office	2f. Date of Distri	bution Statement							
		Determination								
	HQ AFUEG	15 Nov	2.000							
	This report is NOT forwarded for the following reasons.									
	It was previously forwarded to DTIC on (da	·	is							
	It will be published at a later date. Enter approximate date	***********	record that the second control of the ALTS (1994) I DEPTH (1994) where the							
	In accordance with the provisions of DoD Directive 3200.1 because:	2, the requested docu	ment is not supplied							
	en e	***************************************	entenna illing an mandred deprinent months denne "liggiggis".							
,	STATE OF THE PROPERTY OF THE P									
Prin	t or Type Name , Signate	320								
		and the same								
rele 21	1110 Pena phone 0-536-1431	AQ Number 1	101-01-0361							

Operations and Maintenance Manual for Full-Scale Bioventing System at Facility 6454



Vandenberg Air Force Base California

Prepared For

Air Force Center for Environmental Excellence Technology Transfer Division Brooks Air Force Base San Antonio, Texas

and

30 CES/CEVCR Vandenberg Air Force Base California

December 1996



CONTENTS

			<u>Page</u>
SECT	TION 1 -	- INTRODUCTION	1-1
SECT	TION 2 -	- SYSTEM DESCRIPTION	2-1
2.1	Blowe	er System	2-1
2.2		toring and Flow Control Equipment	
		Monitoring Gauges	
		Flow Control Equipment	
SECT	TION 3 -	- SYSTEM MAINTENANCE	3-1
	3.1	Blower/Motor	3-1
	3.2	Air Filter	
	3.3	Maintenance Schedule	3-2
	3.4	Major Repairs	3-2
SECT	TION 4 -	- SYSTEM MONITORING	4-1
4.1	Blowe	er Performance Monitoring	4-1
	4.1.1	Vacuum/Pressure	4-1
	4.1.2	Temperature	4-1
4.2		toring Schedule	
4.3	Repor	ting Monitoring Results	4-2
APPI	ENDIX A	A Regenerative Blower Information	
APPI	ENDIX I	B Data Collection Sheets	

SECTION 1

INTRODUCTION

This Operations and Maintenance (O&M) Manual has been created as a guide for monitoring and maintaining the performance of the full-scale bioventing blower system and vent well plumbing at Vandenberg Air Force Base (AFB), California.

Bioventing is the forced injection of fresh air, or withdrawal of soil gas, to enhance the supply of oxygen in subsurface soils for *in situ* bioremediation. A blower system is used to inject air into the soil, thereby supplying fresh atmospheric air (with approximately 20.8 percent oxygen) to contaminated soils. Once oxygen is provided to the subsurface, existing bacteria aerobically break down fuel residuals. Aerobic biodegradation is much more efficient than anaerobic biodegradation which occurs in oxygen depleted soils.

Parsons Engineering Science, Inc. (Parsons ES) has installed an air injection bioventing system consisting of one air injection blower, four vent wells (VWs), five soil gas monitoring points (MPs), and associated piping at the site. Following the installation and testing of a pilot-scale bioventing system, Parsons ES installed a full-scale bioventing system and initiated system operation on 16 September 1996. The air injection rates of the full-scale bioventing system were optimized at each vent well to assure adequate aeration of contaminated soils to promote aerobic biodegradation.

CES/CEVCR personnel located at Vandenberg AFB are responsible for routine monitoring of the bioventing system. Parsons ES has trained CES/CEVCR personnel on the maintenance requirements of this plan. If significant problems are encountered with the operation of the system, Parsons ES should be notified so repairs can be made. Under the Extended Bioventing Project Option 1, Parsons ES is responsible for system repair for a 1-year period after system startup. Parsons ES will retain responsibility for system repair until 16 September 1997. Should the bioventing system cease to operate or develop a significant problem, please call the Parsons ES Site Manager, Mr. John Jackson, at (818) 440-6207, or Mr. Craig Snyder, at (303) 831-8100. If the system ceases to operate, please have a base electrician verify that adequate power is being supplied to the bioventing system blower motor prior to notifying Parsons ES.

SECTION 2

SYSTEM DESCRIPTION

2.1 BLOWER SYSTEM

A Gast R6 blower powered by a 4-horsepower direct drive motor was installed at Facility 6454 in September 1996. The R6 blower is rated as having a maximum flow rate of 215 standard cubic feet per minute (scfm) at open flow and a maximum pressure of 100 inches of water. As installed, the blower at Facility 6454 was producing an estimated flow rate of 108 actual cubic feet per minute (acfm) at a pressure of 58 inches of water. Approximately 29.5 acfm is being injected into VW1, 22.1 acfm into VW2, 24.5 acfm into VW3, and 27.0 acfm is being injected into VW4. The remainder of the flow is being bled to the atmosphere. Flow was optimized to each VW based on the degree of hydrocarbon contamination present within soils in the vicinity of each VW. The blower system includes an inlet air filter to remove any particulates which are entrained in the inlet air stream and several valves and monitoring gauges which are described in Section 2.2. A schematic of the full-scale blower system installed at Facility 6454 is shown in the record drawings supplied to the base. Corresponding blower performance curves and relevant service information are provided in Appendix A.

2.2 MONITORING AND FLOW CONTROL EQUIPMENT

2.2.1 Monitoring Gauges

The bioventing system is equipped with vacuum, pressure, and temperature gauges, and air velocity measurement ports. Gauges have been installed on the air injection system at the following locations: a vacuum gauge in the inlet piping and pressure and temperature gauges in the outlet piping.

2.2.2 Flow Control Equipment

Manual and automatic flow control valves (FCVs) have been installed on the bioventing blower system. Manual FCVs have been installed in the piping leading to each VW to enable the flow rate to each VW to be adjusted individually. An automatic FCV, or pressure relief valve (PRV), is used to protect the blower system from burning out if pressures rise due to pipe blockage. The PRV is set to bleed off flow at a preset pressure and thus prevent blower outlet pressure from ever exceeding the rated pressure.

A UNIT OF PARSONS INFRASTRUCTURE & TECHNOLOGY GROUP INC.

100 West Walnut Street • Pasadena, California 91124 • (818) 440-4000 • Fax: (818) 440-6200

December 13, 1996

Captain Ed Marchand AFCEE/ERT 3207 North Road, Bldg. 532 Brooks AFB, TX 78235-5363

Subject: Operations and Maintenance Manual, Record Drawings, and Summary of Initial Results for the Full-Scale Bioventing System Installed at Facility 6454, Vandenberg Air Force Base (AFB), California (Contract No. F41624-92-8036, Order 17)

Dear Captain Marchand:

This letter transmits three copies of the Operations and Maintenance (O&M) Manual prepared for the full-scale bioventing system recently installed at Facility 6454, Vandenberg AFB, California. Attachment A of this letter contains record drawings for the installed system. This letter also provides a summary of the work performed by Parsons Engineering Science, Inc. (Parsons ES) at Facility 6454 in September/October 1996, and presents initial system operating parameters and sampling results. A copy of this letter and the O&M Manual also have been sent to Mr. Jack Yamauchi (Vandenberg AFB).

Summary of Field Activities

A full-scale bioventing system was installed at Facility 6454, Vandenberg AFB, California by Parsons ES and subcontractors under the supervision of Parsons ES between September 9 and 13, 1996. The system was installed as described in the *Draft Final Remedial Action Plan (RAP) for Expanded Bioventing System, Facility 6454, Vandenberg Air Force Base, California* (Parsons ES, 1996). Regulatory comments to this draft final RAP were addressed in my letter to Mr. Jack Yamauchi dated August 19, 1996, and the draft final RAP for Facility 6454 served as the final work plan for system installation. There were no significant deviations from the RAP.

Three air injection vent wells (VWs); two soil gas monitoring points (MPs); a regenerative blower system; and piping, controls, and electrical components were installed in the September 1996 field mobilization. The full-scale system also utilizes one VW (VW1) and three soil gas MPs installed by Parsons ES in March 1994 under the AFCEE Bioventing Pilot Test Initiative. Significant short-circuiting of injected air at VW1 was observed at the conclusion of the bioventing pilot test. This problem was corrected in September 1996 by removing the upper 5-foot section of screen (located from 5 to 10 feet bgs) and replacing it with a section of solid casing. A bentonite seal was placed in the annular space around the new casing section. Figure G-0.1 (in



Corps

Captain Ed Marchand Page 2 December 13, 1996

Attachment A) shows the site layout with the locations of the bioventing system components. Additional record drawings showing the final design details of the system components are also provided in the attachment.

Summary of September 1996 Soil and Soil Gas Sampling Results

Five soil and nine soil gas samples were collected by Parsons ES for laboratory analysis. The soil samples were analyzed by Inchcape Testing Services of Richardson, Texas for benzene, toluene, ethylbenzene, and xylenes (BTEX) by US Environmental Protection Agency (USEPA) Method SW8020 and total petroleum hydrocarbons (TPH) by USEPA Method SW8015 modified to fingerprint diesel/jet fuel. The soil gas samples were analyzed by Air Toxics, Ltd. of Folsom, California for BTEX and total volatile hydrocarbons (TVH) referenced to jet fuel by USEPA Method TO-3. In addition, soil gas samples were analyzed in the field by Parsons ES for oxygen, carbon dioxide and TVH using direct-reading instruments. Soil and soil gas results are summarized in Tables 1 and 2, respectively, and sampling locations are shown on Figure G-0.1.

Generally, hydrocarbon contamination at the site was found to be areally extensive and relatively homogeneous throughout the site. This is consistent with previous investigations conducted at the site by Parsons ES and the Bureau of Reclamation. Low soil gas oxygen concentrations were measured in soil gas samples collected at nearly all depths in fuel-impacted soils, indicating that soil microbes are capable of aerobically biodegrading fuel hydrocarbons.

Soil and soil gas hydrocarbon concentrations in the vent wells were highest in the vicinity of VW3 (see Tables 1 and 2). Although the soil sample from VW2 had an elevated concentration of TPH (1,120 mg/kg), BTEX was non-detect. This is commonly encountered with soil samples due to lithologic variability across 6-inch sampling intervals. The relatively low TVH concentration detected in the soil gas at VW1 appears to be the result of bioventing activities that have already occurred at this location. VW1 was used as part of the pilot-scale system, and had been in operation for over a year prior to the conversion to the full-scale system.

All monitoring points, with the exception of MPA, showed elevated soil gas hydrocarbon concentrations using a field hydrocarbon meter. These field instrument values were confirmed with selected laboratory TVH sample analyses conducted for the site (see Table 2). Soil analyses conducted on MPD and MPE indicated little or no presence of TPH. However, elevated BTEX concentrations were found in the soil at both of these MPs (see Table 1).

Potential Vapor Migration

A direct-reading hydrocarbon analyzer was used to measure TVH during initial full-scale system start-up to confirm that hydrocarbon vapors were not migrating into the atmosphere as a result of the bioventing system operation. The greatest potential for vapor migration is during the displacement of the accumulated hydrocarbon vapors in

Captain Ed Marchand Page 3 December 13, 1996

the first pore-volume of soil gas. Air monitoring results indicated that full-scale system start-up did not result in hydrocarbon vapor migration into the atmosphere. Because no vapor concentrations were detected during this critical period, the potential for future migration to the atmosphere is considered very low.

Initial Operation Parameters

The full-scale bioventing system was started on September 16, 1996. The initial air injection rate for each VW was adjusted to approximately 7 cubic feet per minute (cfm). Flow rates were initially limited by high injection pressures encountered in these low-permeability soils. Air flow adjustments were made during two follow up visits to the site until the system approached equilibrium flow rates for each VW. The final flow rates measured at the four VWs at the site on October 30, 1996, were 29.5 cfm (VW1), 22 cfm (VW2), 24.5 cfm (VW3), and 27 cfm (VW4). The corresponding air injection pressure was 58 inches of water.

Oxygen and carbon dioxide soil gas concentrations were measured at the MPs before system start-up and after several weeks of operation to determine the volume of soil being oxygenated by the full-scale bioventing system (Table 3). Soil gas oxygen monitoring results indicate that the effective treatment radius exceeds 40 feet (the estimated radius of influence used for system design), and that nearly the entire volume of soil with significant hydrocarbon contamination is being oxygenated. Soil gas samples could not be collected from some screened intervals due to soil saturation or the presence of impermeable soils. Future monitoring will determine if remediation is occurring in these locations.

Future Site Activities

This site has been funded with an Option 1 under the AFCEE Extended Bioventing Project. Option 1 involves O&M support for 1 year and system monitoring at the end of the year. The O&M support period began following system start-up and will continue until mid-September 1997. The system will be shut down from mid-September 1997 until mid-October 1997 to allow the vadose zone to return to static conditions prior to year-end testing. In late October 1997, Parsons ES will return to the site and perform respiration testing and soil gas sampling. The results of these monitoring activities will be used to develop recommendations for further action at this site. If Option 1 sampling results indicate that the site can be closed after the initial year of bioventing system operation, then closure soil sampling may be recommended. If hydrocarbon contamination is still present at high concentrations and respiration rates are still significant, continued system operation may be recommended.

Captain Ed Marchand Page 4 December 13, 1996

If you have any questions or comments regarding the information contained in this letter or in the enclosed O&M Manual, please contact John Ratz at (303) 764-1909, or me at (818) 440-6207.

Sincerely,

PARSONS ENGINEERING SCIENCE, INC.

J. L. J. J. J.

John A. Jackson Site Manager

Attachments: Table 1, Table 2, Table 3, Record Drawings

Enclosure: O&M Manual

cc: John Ratz (Project Manager)

Jack Yamauchi (Vandenberg AFB)

Larry Dudus (Parsons ES) File 726876.22143L

TABLE 1
SOIL ANALYTICAL RESULTS
FACILITY 6454
VANDENBERG AFB, CALIFORNIA

Analyte (Units)		Samp (feet bo	Sample Location-Depth (feet below ground surface)		
Soil Hydrocarbons	VA2-VW2-10	VA2-VW3-20	VA2-VW4-15	VA2-MPD-15	VA2-MPE-50
TPH (mg/kg) Benzene (ug/kg) Toluene (ug/kg) Ethylbenzene (ug/kg) Xylenes (ug/kg)	1,120 <25°/ <50 <50 <50	769 9,400 67,200 40,500 142,000	36.0 <1,000 13,600 12,000 44,400	<10.0 <500 6,780 6,270 26,700	46.2 360 1,540 3,350 8,660

^{a/} "<" denotes sample concentration less than the laboratory reporting limit shown.

TABLE 2
INITIAL SOIL GAS CHEMISTRY
FACILITY 6454
VANDENBERG AFB, CALIFORNIA

Sample Location	Screen Depth (feet)	O ₂ Field (percent)	CO ₂ Field (percent)	TVH	Benzene Lab (ppmv)	Toluene Lab (ppmv)	Ethylbenzene Lab (ppmv)	Xylenes Lab (ppmv)	TVH Lab (ppmv)
VA2-VW1	10-70	18.3	2.6	310	NA ^{b/}	NA	NA	NA	NA
VA2-VW2	15-70	5.0	5.0	4,800	NA	NA	NA	NA	NA
VA2-VW3	15-70	12.0	4.0	> 20,000	NA	NA	NA	NA	NA
VA2-VW4	15-70	18.2	1.2	5,400	NA	NA	NA	NA	NA
VA2-MPA	10	19.1	0.3	100	NA	NA	NA	NA	NA
VA2-MPA	20	NS c/	SN	NS	NA	NA	NA	NA	NA
VA2-MPA	30	0.9	3.5	230	NA	NA	NA	NA	NA
VA2-MPA	40	10.5	0.4	93	NA	NA	NA	NA	NA
VA2-MPA	20	12.0	8.0	80	NA	NA	NA	NA	NA
VA2-MPA	09	11.0	1.5	100	NA	NA	NA	NA	NA
VA2-MPB	10	1.8	9.5	1,000	NA	NA	NA	NA	NA
VA2-MPB	20	10.0	0.9	18,000	380 ₄ /	540 ^{d/}	50	230	86,000
VA2-MPB	30	SN	NS	NS	NA	NA	NA	NA	NA
VA2-MPB	40	0.5	8.5	> 20,000	80	200	64	240	83,000
VA2-MPB	20	0.9	4.5	> 20,000	300 _d /	290	70	230	71,000
VA2-MPB	09	8.0	9.3	2,000	NA	NA	NA	NA	NA
VA2-MPC	10	1.8	11.2	3,400	NA	NA	NA	NA	NA
VA2-MPC	20	19.0	1.8	7,000	NA	NA	NA	NA	NA
VA2-MPC	30	1.2	11.0	> 20,000	NA	NA	NA	NA	NA
VA2-MPC	40	17.0	2.8	16,000	NA	NA	NA	NA	NA
VA2-MPC	20	1.0	7.0	> 20,000	300 _{d/}	200	84	340	110,000
VA2-MPC	09	1.0	8.0	1,440	NA	NA	NA	NA	NA

VANDENBERG AFB, CALIFORNIA INITIAL SOIL GAS CHEMISTRY TABLE 2 (Cont.) FACILITY 6454

Sample Location	Screen Depth (feet)	O ₂ Field (percent)	CO ₂ Field (percent)	TVH Field (ppmv) ^{a/}	Benzene Lab (ppmv)	Toluene Lab (ppmv)	Ethylbenzene Lab (ppmv)	Xylenes Lab (ppmv)	TVH Lab (ppmv)
VA2-MPD	10	NS	NS	NS	NA	NA	NA	NA	NA
VA2-MPD	20	NS	NS	NS	NA	NA	NA	NA	NA
VA2-MPD	30	2.8	10.1	7,500	NA	NA	NA	NA	NA
VA2-MPD	40	SN	NS	NS	NA	NA	NA	NA	NA
VA2-MPD	20	NS	NS	NS	NA	NA	NA	NA	NA
VA2-MPD	09	NS	SN	SN	NA	NA	NA	NA	NA
VA2-MPE	10	5.2	7.4	> 20,000	84	260 ^{d/}	21	110	72,000
VA2-MPE	20	7.5	7.4	> 20,000	$210^{\mathrm{d}/}$	96	47	160	150,000
VA2-MPE	30	17.0	4.1	> 20,000	NA	NA	NA	NA	NA
VA2-MPE	40	7.1	9.5	> 20,000	$140^{ m d/}$	200 ^{d/}	29	120	94,000
VA2-MPE	50	6.5	7.2	> 20,000	250 ^{d/}	440 ^{d/}	72	260	130,000
VA2-MPE	09	7.1	5.7	> 20,000	320	240	62	280	56,000

Total volatile hydrocarbon field screening results reported in parts per million, volume per volume.

NA = Not analyzed.

NS = Not sampled. Soil gas sample could not be collected due to soil saturation or presence of impermeable soils. Results may be biased due to apparent matrix interferences. Q C Q &

TABLE 3 OXYGEN INFLUENCE FACILITY 6454 VANDENBERG AIR FORCE BASE, CALIFORNIA

			V	Prior to Air	· Injection b/	After System	m Start-Up c/
Sample Location ^{a/}	Screen Depth (feet)	Distance to Nearest Vent Well (feet)	Nearest Vent Well	O ₂ (percent)	CO ₂ (percent)	O ₂ (percent)	CO ₂ (percent)
VA2-MPA-10	10	17	VA2-VW1	19.1	0.3	20.1	0.5
VA2-MPA-30	30	17	VA2-VW1	6.0	3.5	18.5	3.2
VA2-MPA-40	40	17	VA2-VW1	10.5	0.4	19.8	0.9
VA2-MPA-50	50	17	VA2-VW1	12.0	0.8	13.5	5.3
VA2-MPA-60	60	17	VA2-VW1	11.0	1.5	18.1	1.4
VA2-MPB-10	10	26	VA2-VW1	1.8	9.5	5.5	10.5
VA2-MPB-20	20	26	VA2-VW1	10.0	6.0	16.0	3.8
VA2-MPB-40	40	26	VA2-VW1	0.5	8.5	19.0	1.5
VA2-MPB-50	50	26	VA2-VW1	6.0	4.5	19.8	1.2
VA2-MPB-60	60	26	VA2-VW1	0.8	9.3	20.0	0.8
VA2-MPC-10	10	19	VA2-VW3	1.8	11.2	19.0	0.8
VA2-MPC-20	20	19	VA2-VW3	19.0	1.8	17.5	3.0
VA2-MPC-30	30	19	VA2-VW3	1.2	11.0	2.5	10.0
VA2-MPC-40	40	19	VA2-VW3	17.0	2.8	20.0	0.7
VA2-MPC-50	50	19	VA2-VW3	1.0	7.0	20.2	0.5
VA2-MPC-60	60	19	VA2-VW3	1.0	8.0	20.5	0.7
VA2-MPD-30	30	47	VA2-VW1	2.8	10.1	18.5	2.1
VA2-MPE-10	10	36	VA2-VW3	5.2	7.4	13.5	6.3
VA2-MPE-20	20	36	VA2-VW3	7.5	7.4	2.8	13.5
VA2-MPE-30	30	36	VA2-VW3	17.0	4.1	3.1	23.5
VA2-MPE-40	40	36	VA2-VW3	7.1	9.5	2.6	20.0
VA2-MPE-50	50	36	VA2-VW3	6.5	7.2	18.5	3.1
VA2-MPE-60	60	36	VA2-VW3	7.1	5.7	20.0	1.0

Samples could not be collected at all monitoring point depths (due to water or tight soils). Only the points where samples were collected are listed.

b/ As measured in September 15, 1996.

c/ As measured on October 30, 1996.

ATTACHMENT A RECORD DRAWINGS

An additional FCV (bleed valve) has been installed to control the total air flow out of the blower by releasing excess air flow to the atmosphere. The FCVs have been set by Parsons ES personnel to deliver a calculated amount of air to each VW and should not be adjusted unless directed to do so by Parsons ES personnel.

The blower system has also been equipped with flow measurement ports. These ports consist of brass bushings installed in the outlet piping leading to each VW. These bushings, which should be plugged during system operation, allow the insertion of a thermal anemometer for the measurement of air velocity. These ports are used by Parsons ES for system optimization.

Although the blower system installed at Facility 6454 is relatively maintenance free, periodic system maintenance is required for proper operation and long life. Recommended maintenance procedures and schedule are described in detail in the instruction manuals included in Appendix A and briefly summarized in this section.

Filter inspection must be performed with the system turned off. Before restarting the system, the flow control valve which controls the system pressure should be rotated counterclockwise 3 full rotations (reducing the pressure) to avoid a damage to the blower on system restart. After the system has been running for approximately 30 seconds, rotate the system pressure flow control valve clockwise until you reach the original system pressure (prior to system shut-off). Do not change the flow control valve settings for the individual vent wells (valves have been pre-set for a specific flow rate) before re-starting the blower.

SECTION 3

SYSTEM MAINTENANCE

3.1 BLOWER/MOTOR

The blower and motor are relatively maintenance free and should not require any maintenance during the operational period. Both the blower and motor have sealed bearings and do not require lubrication.

3.2 AIR FILTER

To avoid damage caused by passing solids through the blower, an air filter has been installed in-line before the blower. The paper filter element is accompanied by a polyurethane foam pre-filter. The filter should be checked weekly for the first 2 months of operation. A facility employee should determine the best schedule for filter replacement based on the first 2 months of system monitoring. The polyurethane pre-filters can be washed with lukewarm water and a mild detergent. Paper filter elements should never be washed, and should be disposed of and replaced as necessary. When the vacuum drop across the filter increases by approximately 10 inches of water from the vacuum when the filter was new, a dirty filter element should be suspected, and cleaning or replacement should be performed. The initial vacuum when the filter element was new was 10 inches of water. Therefore, the filter should be cleaned or replaced when the vacuum increases to 20 inches of water. Typical filter element replacement intervals range from 3 to 6 months.

To remove the filter, turn the system off by pushing the stop button on the starter, loosen the wing nut on the filter top, lift the metal top off the air filter, and lift the air filter element from the metal housing. Remove the polyurethane pre-filter (if applicable) and wash before replacing. Before restarting the system, the flow control valve which controls the system pressure should be rotated counterclockwise 3 full rotations (reducing the pressure) to avoid a damage to the blower on system restart. After the system has been running for approximately 30 seconds, rotate the system pressure control valve clockwise until you reach the original system pressure (prior to system shut-off).

The filter element is manufactured by Solberg Manufacturing, Inc. in Itasca, Illinois. Their toll free telephone number is 1-800-451-0642. Additional filters can also be obtained through Parsons ES. The Parsons ES contacts are Mr. John Jackson, at (818) 440-6207, and Mr. Craig Snyder, at (303) 831-8100. The part number for the replacement filter element is 30P. Four spare air filter elements have been placed inside the blower enclosure.

3.3 MAINTENANCE SCHEDULE

The following maintenance schedule is recommended for the blower system. During the initial few months of operation more frequent monitoring is recommended to ensure that any startup problems are quickly corrected. A daily drive-by inspection is recommended during the initial 2 weeks of operation to ensure that the blower system is still operating with no unusual sounds. Thereafter monitoring inspections every 2 weeks are recommended (see Section 4). Preprinted data collection sheets have been provided to the facility. Extra data collection sheets for recording maintenance activities are provided in Appendix B.

Maintenance Item Maintenance Frequency

Filter Check once every 2 weeks, wash or replace as necessary (see Section 3.3). Inlet vacuum exceeding 20 inches of water indicates that the filter

requires cleaning or replacement.

3.4 MAJOR REPAIRS

Blowers systems are very reliable when properly maintained. Occasionally, however, a motor or blower will develop a serious problem. If a blower system fails to start, and a qualified electrician verifies that power is available at the blower or starter, Parsons ES should be contacted to arrange for repairs. The Parsons ES contacts are Mr. John Jackson, at (818) 440-6207, and Mr. Craig Snyder, at (303) 831-8100. Parsons ES is responsible for major repairs during the first year of operation.

SECTION 4

SYSTEM MONITORING

4.1 BLOWER PERFORMANCE MONITORING

To monitor the blower performance, the vacuum, pressure, and temperature will be measured. These data should be recorded every 2 weeks on a data collection sheet (provided in Appendix B). All measurements should be taken at the same time while the system is running. Because the systems are noisy, hearing protection should be worn at all times.

4.1.1 Vacuum/Pressure

With hearing protection in place, unlock and open the blower enclosure and record all vacuum and pressure readings directly from the gauges (in inches of water). Record the measurements on the data collection sheet.

4.1.2 Temperature

With hearing protection in place, open the blower enclosure and record the temperature readings directly from the gauges in degrees Fahrenheit ($^{\circ}F$). Record the measurements on a data collection sheet (provided in Appendix B). The temperature change can be converted to degrees Celsius ($^{\circ}C$) using the formula $^{\circ}C = (^{\circ}F - 32) \times 5/9$.

4.2 MONITORING SCHEDULE

The following monitoring schedule is recommended for these systems. During the initial month of operation, more frequent monitoring is recommended to ensure that any start up problems are quickly corrected. Data collection sheets have been provided to assist your data collection and are included in Appendix B.

Monitoring Item	Monitoring Frequency
Vacuum/Pressure	Once every 2 weeks.
Temperature	Once every 2 weeks.

4.3 REPORTING MONITORING RESULTS

System monitoring data sheets should be faxed to the Parsons ES Site Manager, Mr. John Jackson at (818) 440-6200, once every 2 months. However, if a significant change in the system temperature or pressure is noted (such as a significant drop or increase in pressure) please call Mr. Jackson at (818) 440-6207 immediately. A significant change in system temperature or pressure may be indicative of a problem with the air delivery system or blower.

APPENDIX A

REGENERATIVE BLOWER INFORMATION

Gast Manufacturing Corp. P.O. Box 97 Benton Harbor, MI 49023-0097 (616) 926-6171

Model R6340R-50

Motor Specifications

Phase	HZ	HP	Voltage	Full Load Amps
3	50	4	208-230 / 460	13-12 / 6

Overall Dimensions


Height	Width	<u>Depth</u>	<u>Net Weight</u>
15.34 in	18.82 in	15.17 in	112 lb
390 mm	48 mm	385 mm	51 kg


<u>Performance</u>

Maximum Vacuum	<u> Maximum Pressure</u>	Maximum Flow
80 inH20	100 inH20	215 cfm
199 mbar	249 mbar	365 m³h


SOIL VAPOR EXTRACTION PUMPS - REGENERATOR BLOWERS

Model R3

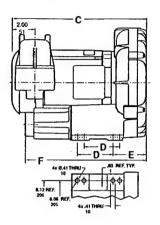


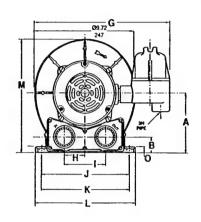

Models R6P, R7

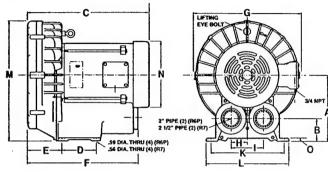

Models R4, R4P, R5, R6

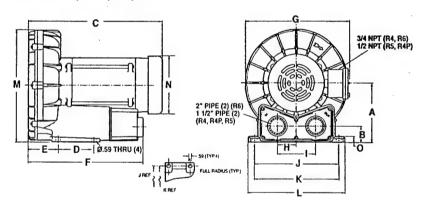

Product Din	nensior	ns Me	etric (mm	n) (J.S. Imp	erial (in	ches)								
Model	Α	В	С	D	E	F	G	Н	ı	J	K	L	M	N	0
R3105N-50	131	35	310	83	80	281	324	49	9 9	205	206	238	258	-	13
	5.17	1.37	12.20	3.25	3.03	11.06	12.75	1.94	3.88	8.06	8.12	9.38	10.15	-	.53
R4110N-50	157	43	389	95	72	316	313	50	101	225	227	254	293	175	11
	6.18	1.68	15.30	3.75	2.85	12.44	12.31	1.98	3.96	8.86	8.93	10.00	11.73	6.88	.44
R4310P-50	157	43	356	95	72	316	313	50	101	225	227	254	293	175	11
	6.18	1.68	14.03	3.75	2.84	12.44	12.31	1.98	3.96	8.86	8.93	10.00	11.73	6.88	.44
R4P115N-50	177	47	442	114	83	354	338	60	121	260	262	298	346	175	15
	6.98	1.84	17.41	4.50	3.25	13.93	13.31	2.38	4.75	10.25	10.31	11.75	13.6	6.88	.60
R5125Q-50	178	46	445	114	91	361	344	60	121	260	262	298	350	173	15
	7.00	1.82	17.50	4.50	3.58	14.22	13.56	2.38	4.75	10.25	10.31	11.75	13.78	6.81	.59
R5325R-50	178	46	423	114	91	361	344	60	121	260	262	298	350	183	15
	7.00	1.82	16.66	4.50	3.58	14.22	13.56	2.38	4.75	10.25	10.31	11.75	13.78	7.19	.59
R6130Q-50	197	49	511	140	98	404	389	62	125	289	290	329	391	217	13
	7.75	1.94	20.13	5.50	3.85	15.89	15.30	2.46	4.92	11.38	11.42	12.96	15.38	8.56	.52
/R6340R-50	197	49	478	140	98	404	385	62	125	289	290	329	390	217	13
	7.75	1.94	18.82	5.50	3.85	15.89	15.17	2.46	4.92	11.38	11.42	12.96	15.34	8.56	.52
R6P155Q-50	248	80	602	140	137	438	428	64	127	-	290	325	463	257	13
	9.77	3.15	23.7	5.51	5.39	17.25	16.87	2.50	5.00	-	11.42	12.80	18.21	10.12	.50
R6P355R-50	248	80	554	140	137	438	428	64	127	-	290	325	463	257	13
•	9.77	3.15	21.80	5.51	5.39	17.25	16.87	2.50	5.00	-	11.42	12.80	18.21	10.12	.50
R7100R-50	274	92	577	216	212	545	457	100	200	-	375	410	509	257	14
	10.79	3.64	22.72	8.50	8.33	21.46	18.00	3.94	7.88	-	14.76	16.14	20.02	10.12	.56

Notice: Specifications subject to change without notice.


SOIL VAROR EXTRACTION PUMPS - REGENERATIVE BLOWER


Product S	pecificatio	ns
Model	1	
	l	_

Model	Motor Specifications					Max Vac Max Pressure Max Flow					Net.	Wt	
Number	Phase	Hz	Voltages	HP	Full Load Amps	"H₂O	mbar		mbar	cfm	m³h	lbs	
R3105N-50	Single	50	110/220-240	.33	3-8/1.9-2.0	28	70	31	77	43	73		
	Olligie	60	115/208-230	0.5	5.2/2.9-2.6	40	100	43	107	53	90	52	24
R4110N-50	Single	50	110/220-240	0.6	9.2/5.2-4.6	35	87	38	95	74	126		
11411011-50	Olligie	60	115/208-230	1.0	11.4/6.2-5.6	48	120	51	127	92	156	60	28
R4310P-50	Three	50	220/380	0.6	3.2/1.6	35	87	38	95	74	126		-
1140101-00	THEE	60	208-230/460	1.0	3.4-3.3/1.65	48	120	51	127	92	156	58	27
R4P115N-50	Single	50	110/220-240	1.0	15.2/7,6-8	40	100	45	112	112	190		_
	Onlyle	60	115/208-230	1.5	18.2/9.7-9.1	60	149	65	162	133	226	79	36
R5125Q-50	Single	60	115/230	2.0	25/12.5	60	149	55	137	160	272	77	35
R5325R-50	Three	50	190-220/380-415	1.5	5.0-4.4/2.5-2.6	47	117	50	125	133	226	//	33
11502511-50		60	208-230/460	2.0	6.0-5.6/2.8	60	149	65	162	160	272	75	34
R6130Q-50	Single	50	220-240	2.5	14.7-13.5	65	162	75	187	182	309		1
1101004-30		60	230	3.0	16.3	70	174	60	149	215	365	129	59
R6340R-50	Three	50	190-220/380-415	3.0	14.4-13.4/7.2-6.8	65	162	75	187	180	306		1
11034011-30	Three	60	208-230/460	4.0	13-12/6	80	199	100	249	215	365	112	51
R6P155Q-50	Cinala	50	220-240	4.0	20.8-19.1	65	162	80	199	235	399		
HUF 133Q-30	Single	60	230	5.5	29.9	85	212	95	237	280	476	243	110
R6P355R-50	Thron	50	190-220/380-415	4.5	14.9-11/7.45-5.8	65	162	80	199	232			
N0F355R-50	Three	60	208-230/460	6.0	20-18/9	85	212	100	249	280	394	233	105
D7100D 50	T	50	190-220/380-415	8.0	20.8-18.9/10.4-9.5	72	179	80		_	476		
R7100R-50	Three	60	208-230/460	10.0	26.5-24/12	90	224	90	199	350	595	297	134
NOTICE: Performance	specifications	subject to	change without notice.		20.0 24/12	30	224	90	224	420	714		


de la constant de la


VACUUM

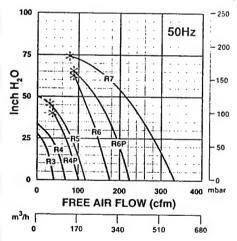

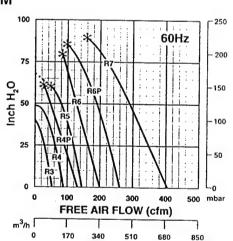

PRESSURE

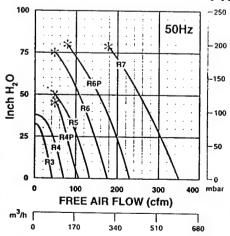

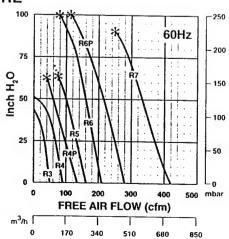



Free software identifies best Gast blowers for soil and groundwater remediation

Now you can size and select regenerative blowers and accessories for soil and groundwater remediation systems faster, easier and more accurately than ever before. Gast remediation system engineering software does the job and it is yours for the asking. The 3-1/2-inch IBM-compatible disk calculates performance when the blower is operating with both a vacuum and pressure load at the same time. The programs will also compensate for changes in performance from altitude and temperature, helping you identify the optimum Gast blowers for your application.

Call 1-800-952-4278 to receive your free remediation system engineering software.




Post Office Box 97

Benton Harbor, Michigan 49023-0097

616/926-6171 Fax: 616/925-8288

Maintenance Instructions for Gast Standard Regenerative Blowers

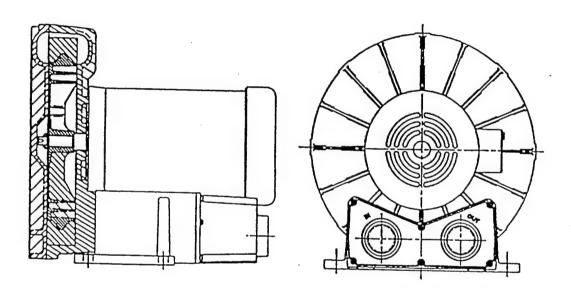

For original equipment manufacturers special models, consult your local distributor

Gast Rebuilding Centers

Gast Mfg. Corp. 2550 Meadowbrook Rd. Benton Harbor MI. 49022

Ph: 616/926-6171 Fax: 616/925-8288

Wainbee, Limited

215 Brunswick Drive Pointe Claire, P.Q. Canada H9R 4R7

Ph: 514/697-8810 Fax: 514/697-3070

Gast Mfg Corp. 505 Washington Avenue Carlstadt, N. J. 07072

Ph: 201/933-8484 Fax: 201/933-5545

Brenner Fledler. & Assoc. 13824 Bentley Place Certios, CA. 90701 Ph: 213/404-2721

Fax: 213/404-7975

Gast Mig. Co. Limited. Halifax Rd, Cressex Estate High Wycombe, Bucks HP12 3SN


Ph. 44 494 523571 Fax: 44 494 436588

Walnbee, Umited 121 City View Drive Toronto, Ont. Canada M9W 5A9

Ph: 416/243-1900 Fax: 416/243-2336

Japan Machinery Co. Ltd. Central PO Box 1451 Tokyo 100-91 Japan Ph:

813/3573-5421 813/3571-7865

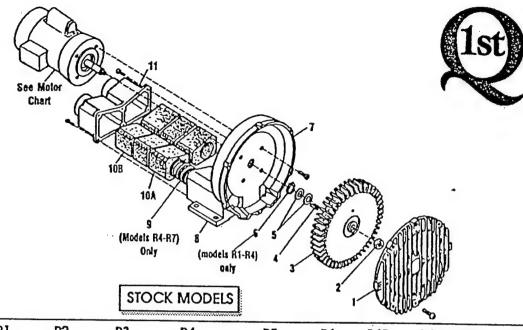

RI	R2	R3	R4	R5	R6	R6P	R6PP/R6PS	R7
AJ101A	AJ101B	AJ101C	AJIOID	Alloleo	A IIOIE	AHOIK	(2) A 1101VA (4 11010
BC187	BC187	BC181						AJ101G BC183
AJ102A	AJ102BQ	AJ102C	AJ102D		AJ102FR	AJ102K		AJ102GA
			AB136D	AB136	AB136	AB136	(2)AB136	AC628
				AJ109	AJ116A	AJ116A	AJ116A	AJ110
							·	
AJIOSA	VIIO2PS	V1102C	AJ103DR			V)103K	AJ103KD	AJ103GA
			AILIADD			4 (11250)		
(4)AJ112A	(4)AJ112B	(4)AJ112C						AJ113G
	(2)AJ112BQ					10/13/12/		(8)AJ112GA
	_AJ106BQ	AJI06CQ	AJIO6DQ	AJ106EQ	AJIOSEQ	AJ104K		AJ104GA
K396	K396							K395
	AJ101A BC187 AJ102A AH212C AJ132 AJ145 AJ103A (4)AJ112A	AJ101A AJ101B BC187 BC187 AJ102A AJ102BQ AH212C AH212 AJ132 AE686-3 AJ145 AJ145 AJ103A AJ103BQ (4)AJ112A (4)AJ112B (2)AJ112BQ n/ AJ106H AJ106BQ	AJ101A AJ101B AJ101C BC187 BC187 BC181 AJ102A AJ102BQ AJ102C AH212C AH212 AB136A AJ132 AE686-3 AJ109 AJ145 AJ145 AJ149 AJ103A AJ103BQ AJ103C (4)AJ112A (4)AJ112B (4)AJ112C (2)AJ112BQ (2)AJ112CQ n/ AJ106H AJ106BQ AJ106CQ	AJ101A AJ101B AJ101C AJ101D BC187 BC187 BC181 BC181 AJ102A AJ102BQ AJ102C AJ102D AH212C AH212 AB136A AB136D AJ132 AE686-3 AJ109 AJ109 AJ145 AJ145 AJ149 AJ149 AJ103A AJ103BQ AJ103C AJ103DR (4)AJ112A (4)AJ112B (4)AJ112C (4)AJ112DS (2)AJ112BQ (2)AJ112CQ (2)AJ112DR n/ AJ106H AJ106BQ AJ106CQ AJ106DQ	AJ101A AJ101B AJ101C AJ101D AJ101EQ BC187 BC187 BC181 BC181 BC181 AJ102A AJ102BQ AJ102C AJ102D AJ102E AH212C AH212 AB136A AB136D AB136 AJ132 AE686-3 AJ109 AJ109 AJ109 AJ145 AJ145 AJ149 AJ149 AJ103A AJ103BQ AJ103C AJ103DR AJ103E AJ103A AJ103BQ AJ103C AJ103DR AJ104E (4)AJ112A (4)AJ112B (4)AJ112C (4)AJ112DS (4)AJ112EQ (C2)AJ112BQ (2)AJ112CQ (2)AJ112DR (2)AJ112EQ AJ106H AJ106BQ AJ106CQ AJ106DQ AJ106EQ	AJ101A AJ101B AJ101C AJ101D AJ101EQ AJ101F BC187 BC187 BC181 BC181 BC181 BC181 AJ102A AJ102BQ AJ102C AJ102D AJ102E AJ102FR AH212C AH212 AB136A AB136D AB136 AB136 AJ132 AE686-3 AJ109 AJ109 AJ109 AJ109 AJ116A AJ145 AJ145 AJ149 AJ149 AJ103A AJ103BQ AJ103C AJ103DR AJ103E AJ103F AJ103A AJ103BQ AJ103C AJ103DR AJ104E AJ104F (4)AJ112A (4)AJ112B (4)AJ112C (4)AJ112DS (4)AJ112EQ (5)AJ112FQ (C2)AJ112BQ (2)AJ112CQ (2)AJ112DR (2)AJ112EQ n/ AJ106H AJ106BQ AJ106CQ AJ106DQ AJ106EQ AJ106FQ	AJ101A AJ101B AJ101C AJ101D AJ101EQ AJ101F AJ101K BC187 BC187 BC181 BC181 BC181 BC181 BC181 AJ102A AJ102BQ AJ102C AJ102D AJ102E AJ102FR AJ102K AH212C AH212 AB136A AB136D AB136 AB136 AB136 AJ132 AE686-3 AJ109 AJ109 AJ109 AJ116A AJ116A AJ145 AJ145 AJ149 AJ149 AJ103A AJ103BQ AJ103C AJ103DR AJ103E AJ103F AJ103K AJ103A AJ103BQ AJ103C AJ103DR AJ103E AJ104E AJ113DR AJ113DQ AJ113FQ AJ113FQ (4)AJ112A (4)AJ112B (4)AJ112C (4)AJ112DS (4)AJ112ER (6)AJ112F (8)AJ112K (2)AJ112BQ (2)AJ112CQ (2)AJ112DR (2)AJ112EQ n/ AJ106H AJ106BQ AJ106CQ AJ106DQ AJ106EQ AJ106FQ AJ104K	AJ101A AJ101B AJ101C AJ101D AJ101EQ AJ101F AJ101K (2)AJ101KA BC187 BC187 BC181 BC181 BC181 BC181 BC181 (2)BC182 AJ102A AJ102BQ AJ102C AJ102D AJ102E AJ102FR AJ102K (2)AJ102KA AH212C AH212 AB136A AB136D AB136 AB136 AB136 (2)AB136 AJ132 AE686-3 AJ109 AJ109 AJ109 AJ116A AJ116A AJ116A AJ145 AJ145 AJ149 AJ149 AJ103A AJ103BQ AJ103C AJ103DR AJ103F AJ103F AJ103K AJ103KD AJ103A AJ103BQ AJ103C AJ103DR AJ113DQ AJ113FQ AJ113FQ (4)AJ112A (4)AJ112B (4)AJ112C (4)AJ112DS (4)AJ112ER (6)AJ112F (8)AJ112K (2)AJ112BQ (2)AJ112CQ (2)AJ112DR (2)AJ112EQ n/ AJ106H AJ106BQ AJ106CQ AJ106DQ AJ106EQ AJ106FQ AJ104K

MOTOR CHART

REGENAIR				
MODEL	MOTOR	MOTOR SPECIFIC 60 HZ	50 HZ	
NUMBER	NUMBER	VOLTS	VOLTS	PHASE
**************************************	***************************************		************************	***************************************
R1102	J111X	115/208-230	110/220-240	1
R1102C	J112X	115		1
R2103	J311X	115/208-230	110/220	1
R2105	J411X	115/208-230	110/220	1
R2303A	J310	208-230/460		3
R2303F	J313	208-230	220	3
	J411X	115/208-230	110/220-240	1
R3305A-1/R3305A-1	3 J410	208-230/460		3
R4110-2	XAII6U	115/208-230	110/220-240	1
R4310A-2	J610	208-230/460	220/380-415	3
R5125-2	J811X	115/208-230		1
R5325A-2	J810X	208-230/460	220/380-415	3
R6125-2	J811X	115/208-230		· · · · · · · · · · · · · · · · · · ·
R6325A-2	J810X	208-230/460	220/380-415	3
R6335A-2	J910X	208-230/460	220/380-415	******
R6150J-2	J1013	230		Y
R6350A-2	JIOIO	208-230/460	220/380-415	
R6P335A	J910X	208-230/460	220/380-415	3
R6P350A	J1010	208-230/460		
R6P355A	J1110A	208-230/460	220/380-415	3
R7100A-2*	J1210B	208-230/460	220/580-415	000000000000000000000000000000000000000
R6PP/R6PS3110M	JD1100	208-230/460	220/380-415	3

No lubrication needed at start up.
 Bearings lubricated at factory.

Motor is equipped with alemite fitting.
 Clean tip of fitting and apply grease gun.
 Use 1 to 2 strokes of high quality ball bearing grease.

Consistency Type Typical
Grease
Medium Lithium Shell Dollium R

Hours of service Suggested Relube Interval

5,000 3 years

Continual Normal Application 1 year

Seasonal service motor I year beginning of season 6 months

Continuous-high ambients, dirty or molst applications.



Post Office Box 97 Benton Harbor, Ml. 49023-0097 Ph: 616/926-6171

Fax: 616/925-8288

INSTALLATION AND OPERATING INSTRUCTIONS FOR GAST HAZARDOUS **DUTY REGENAIR BLOWERS**

This instruction applies to the following models ONLY: R3105N-50, R4110N-50, R4310P-50, R4P115N-50, R5125Q-50, R5325R-50, R6130Q-50, R6P155Q-50, R6350R-50, R6P355R-50 and R7100R-50.

Gast Authorized Service Facilities are Located in the locations listed below

Gast Manufacturing Corporation 505 Washington Avenue Carlstadt, N. J. 07072

Ph: 201/933-8484 Fax: 201/933-5545

Gast Manufacturing Corporation 2550 Meadowbrook Road Benton Harbor, Ml. 49022 Ph: 616/926-6171

Fax: 616/925-8288

Brenner Fledler & Associates Wainbee Limited

Centtos, CA. 90701 Ph: , 310/404-2721

13824 Bentley Place 215 Brunswick Blvd. Pointe Claire, Quebec Canada H9R 4R7 800/843-5558 Ph: 514/697-8810 Fax: 310/404-7975 Fax: 514/-697-3070

Wainbee Limited 5789 Coopers Ave. Mississauga, Ontario Canada L4Z 3S6 Ph: 416/243-1900 Fax: 416/243-2336

Japan Machinery Central PO Box 1451 Toyko 100-91, Japan Ph: 813 3573-5421 Fax: 813 3571-7896

Gast Manufacturing Co. Ltd. Halifax Road, Cressex Estate High Wycombe, Bucks HP12 3SN England Ph: 44 494 523571

Fax: 44 494 436588.

OPERATING AND MAINTENANCE INSTRUCTIONS

SAFETY

This is the safety alert symbol. When you see this symbol personal injury is possible. The degree of injury is shown by the following signal words:

DANGER Severe injury or death will occur if hazard is ignored.

WARNING Severe injury or death can occur if hazard is ignored.

CAUTION Minor injury or property damage can occur if hazard is ignored.

Review the following information carefully before operating.

GENERAL INFORMATION

This instruction applies to the following models ONLY: R3105N-50, R4110N-50, R4310P-50, R4P115N-50, R5125Q-50, R5325R-50, R6130Q-50, R6P155Q-50, R6350R-50, R6P355R-50 and R7100R-50. These blowers are intended for use in Soil Vapor Extraction Systems. The blowers are sealed at the factory for very low leakage. They are powered with a U.L. listed electric motor Class T Div. 1 Group D motors for Hazardous Duty locations. Ambient temperature for normal full load operation should not exceed 40° C (105° F). For higher ambient operation, contact the factory.

Gast Manufacturing Corporation may offer general application guidance: however, suitability of the particular blower and/or accessories is ultimately the responsibility of the user, not the manufacturer of the blower.

INSTALLATION

DANGER Models R5325R-50, R6130Q-50, R6350R-50, R5125Q-50, R6P155Q-50, R6P355R-50 AND R7100R-50 use Pilot Duty Thermal Overload Protection. Connecting this protection to the proper control circuitry is mandated by UL674 and NEC501. Failure to do so could may result in a EXPLOSION. See pages 3 and 4 for recommended wiring schematic for these models.

WARNING Electric shock can result from bad wiring: A qualified person must install all wiring, conforming to all required safety codes. Grounding is necessary.

WARNING This blower is intended for use on soil vapor extraction equipment. Any other use must be approved in writing by Gast Manufacturing. Corp. Install this blower in any mounting position. Do not block the flow of cooling air over the blower and motor.

PLUMBING - Use the threaded pipe ports for connection only. They will not support the plumbing. Be sure to use the same or larger size pipe to prevent air flow restriction and overheating of the blower. When installing fittings, be sure to use pipe thread sealant. This protects the threads in the blower housing and prevents leakage. Dirt and chips are often found in new plumbing. Do not allow them to enter the blower.

NOISE - Mount the unit on a solid surface that will no increase the sound. This will reduce noise and vibration We suggest the use of shock mounts or vibration isolation material for mounting.

ROTATION - The Gast Regenair Blower should only rotate clockwise as viewed from the electric motor side. The casting has an arrow showing the correct direction. Confirm the proper rotation by checking air flow at the IN and OUT ports. If needed reverse rotation of three phase motors by changing the position of any two of the power line wires.

OPERATION

MARNING Solid or liquid material exiting the blower or piping can cause eye damage or skin cuts. Keep away from air stream.

↑ WARNING - Gast Manufacturing Corporation will not knowingly specify, design or build any blower for installation in a hazardous, combustible or explosive location without a motor conforming to the proper NEMA or U. L. standards. Blowers with standard TEFC motors should never be utilized for soil vapor extraction applications or where local state and/or Federal codes specify the use of explosion-proof motors (as defined by the National Electric Code, Articles 100,500 c1990).

CAUTION Attach blower to solid surface before starting to prevent injury or damage from unit movement. Air
containing solid particles or liquid must pass through a
filter before entering the blower. Blowers must have
filters, other accessories and all piping attached before
starting. Any foreign material passing through the blower
may cause internal damage to the blower.

⚠ CAUTION Outlet piping can burn skin. Guard or limit access. Mark "CAUTION Hot Surface. Can Cause Burns". Air temperature increases when passing through the blower. When run at duties above 50 in. H₂O metal pipe may be required for hot exhaust air. The blower must not be operated above the limits for continuous duty. Only models R3105N-50, R4110N-50 and R4310P-50 can be operated continuously with no air flowing through the blower. Other units can only be run at the rating shown on the model number label. Do not Close off inlet (for vacuum) to reduce extra air flow. This will cause added heat and motor load. Blower exhaust air in excess of 230°F indicates operation in excess of rating which can cause the blower to fail.

ACCESSORIES...Gast pressure gauge AJ496 and vacuum gauges AJ497 or AE134 show blower duty. The Gas pressure/vacuum relief valve, AG258, will limit the operating duty by admitting or relieving air. It also allows full flow through the blower when the relief valve closes.

SERVICING


WARNING To retain their sealed construction they should be serviced by Gast authorized service centers ONLY. These models are sealed at the factory for very low leakage.

WARNING Turn off electric power before removing blower from service. Be sure rotating parts have stopped. Electric shock or severe cuts can result. Inlet and exhaust filters attached to the blower may need cleaning or replacement of the elements. Failure to do so will result in more pressure drop, reduced air flow and hotter opera-

tion of the blower. The outside of the unit requires cleaning of dust and dirt. The inside of the blower also may need cleaning to remove foreign material coating the impeller and housing. This should be done at a Gast Authorized Service Center. This buildup can cause vibration, failure of the motor to operate or reduced flow.


KEEP THIS INFORMATION WITH THIS BLOWER. REFER TO IT FOR SAFE INSTALLATION, OPERATION OR SERVICE.

MOTOR WIRING DIAGRAM FOR R4110N-50 & R3105N-50

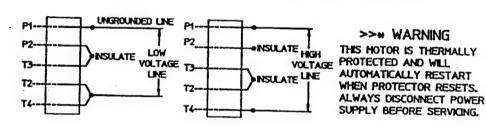

MOTORS WIRING DIAGRAM FOR R4310P-50


TO REVERSE ROTATION, INTERCHANGE THE EXTERNAL CONNECTIONS TO ANY TWO LEADS,

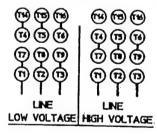


>># WARNING
THIS MOTOR IS THERMALLY
PROTECTED AND WILL
AUTOMATICALLY RESTART
WHEN PROTECTOR RESETS,
ALWAYS DISCONNECT POWER
SUPPLY BEFORE SERVICING.


MOTORS WIRING DIAGRAM FOR R5325R-50, R6350R-50, R6P355R-50, & R7100R-50

TO REVERSE ROTATION.
INTERCHANGE THE
EXTERNAL CONNECTIONS
TO ANY TWO LEADS.

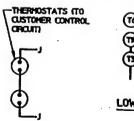




MOTOR WIRING DIAGRAM FOR R5125Q-50 & R4P115N-50

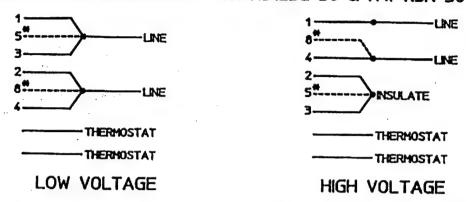


* R51250-50 BLOWERS PRODUCED AFTER SEPTEMBER 1992 (SER. NO. 0992)
DO NOT HAVE MOTOR LEADS 5 & 8.

MOTOR WIRING DIAGRAM FOR R6130Q-50 & R6P155Q-50



CONNECTION FOR THERMOSTAT MOTOR PROTECTION

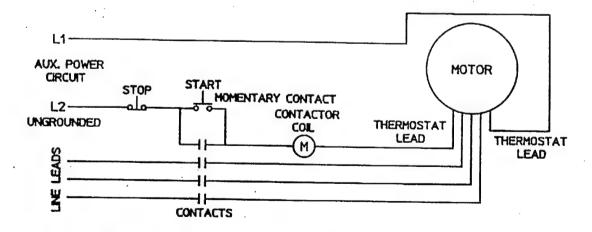

TERMOSTATS TO BE CONNECTED IN SERIES WITH CONTROL AS SHOWN. MOTOR FURNISHED WITH AUTOMATIC THERMOSTATS RATED A.C. 115-600V. 720VA

Blower Accessories

In-line Filters


The impeller of a blower passes very close to the housing. It is always wise to have an inlet or in-line filter to ensure troublefree life.



Model No.	84	R5	R6,R6P	R7
Part No.	AJ151D	AJ151E	AJ151G	AJ151H
Replacement Element	AJ135E	AJ135F	AJ135G	AJ135C
Micron	10	10	10	10

Vacuum and Pressure Gauges

To monitor the system performance so as not to exceed maximum duties. Using two (one on each side of the filter) is a great way to know when the filter needs servicing.



- Vacuum Gauge, Part #AE134, 2 5/8" Dia., 1/4" NPT, 0-160 in. H₂O and 0-400 mbar
- Pressure Gauge, Part #AJ496, 2 5/8" Dia., 1/4" NPT, 0-60 in. H₂O and 0-150 mbar
- Pressure Gauge, Part #AE133, 2 5/8" Dia., 1/4" NPT, 0-160 in. H₂0 and 0-400 mbar
- \bullet Pressure Gauge, Part #AE133A, 2 5/8" Dia., 1/4" NPT, 0-200 in. $\rm H_2O$

Horizontal Swing Type Check Valve

Designed to prevent back-wash of fluids that would enter the blower. Also prevents air back-streaming if needed. They can be mounted with their discharge either vertical or horizontal. Valve will open with 3" of water pressure.

/alve	Alla
e A	

Model No.	R4,R5	R6,R6P	R7	
Part No.	AH326D	AH326F	AH326G	
	1 1/2" NPT	2" NPT	2 1/2" NPT	

Moisture Separator

The purpose of the moisture separator is to remove liquids from the gas stream in a soil vapor extraction process. This helps protect the blower from corrosion and a build up of mineral deposits.

	LIQUID CAPACITY	
MODEL	GALLONS	USED ON
RMS160	10	R4, R4P, R5
RMS200	19	R4, R4P, R5, R6
RMS300	19	R5, R6, R6P
RMS400	40	R6P, R7




Relief Valve

By setting a relief valve at a given pressure/vacuum you can be assured that no harm will come to the blower or products in your application from excessive duties.

 \bullet Pressure/Vacuum Relief Valve, 1 1/2" NPT, Adjustable 30 - 170 in. H₂0, 200 cfm max. Part #AG258



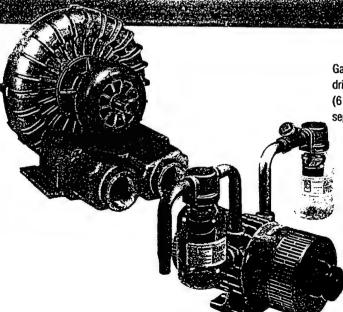

Gast also offers other models that are ideal for soil sparging. Our separate drive blowers are available in 4 sizes to 15 hp, pressures to 170" $\rm H_2O$ (6 psi). Rotary vane compressors are available in motor mounted or separate drive styles up to 5 hp, pressures to 20 psi.



LOW PRESSURE GAUGES

Types 611.10 & 612.20

WIKA INSTRUMENT CORPORATION 1000 Wiegand Boulevard Lawrenceville, Georgia 30243-5868 (404) 513-8200 1-600-645-0606 FAX: (404) 513-8203

PRICE LIST

Type 611.10 2 ½" (63mm) Type 612.20 4" (100mm)



Standard Features

'Case: Black painted steel (611.10)

Stainless steel (612.20)

Bayonet Ring: None (21/2")

Stainless steel (4")

Wetted Parts: Copper alloy
Window: Acrylic (21/4")

Acrylic (2½")

Instrument glass (4")

Dial: White aluminum Pointer: Black aluminum Accuracy: ± 1.5% of span

Brass movement with highly polished bearing surfaces

Recalibration screw on dial

Special Order Options

50 pcs. minimum order quantity per line item required (611.10) 25 pcs. minimum order quantity per line item required (612.20)

Custom Dials - Special scales and dial markings are available. Standard list prices apply. Add any applicable artwork/set-up charges, Refer to "Custom Dial Artwork Charges" (price page PL95-32).

Special Connections - No additional charge for standard NPT or metric threads. Contact factory for other special threads.

Gauge Accessories - Additional accessories may be available. Refer to "Pressure Gauge Accessories" (price page PL95-30).

Additional Options Available -

Nickel or chrome plated connection Lower back mount (Type 612.20 only)

Rear flange

U-clamp

Safety glass window

Stainless steel wetted parts 21/2" (631.10)

Stainless steel wetted parts 4" (632.50)

(refer to price page PL95-21 for prices)

Cleaned for oxygen service

Stainless steel case and ring

Red drag pointer

Items with part numbers are available from stock (subject to prior sale).

Please use applicable part numbers when ordering.

 Items shown without part numbers are available on special order at no additional charge. Above listed minimum order quantities per line item required. Contact factory for current lead times.

r						
Туре	_	61	612.20			
Size		2	¥2*	4.		
Connectio	n	LM 🌳	СВМ	LM P		
Conn. Size	,		1/4" NPT	;		
Data Shee	t	APM	06.01	APM 06.02		
List Price		\$43.25	\$47.55	\$139.15		
Vacuum Ra	nge (dua	l scale)				
inch	mm			1		
water	water			1		
0-30	0-760	9852344	9851852	9747724		
0-60	0-1500	9748321	9748339			
0-100	0-2500	9747473	9747465			
Pressure Ra	mm	iai scaie)		 		
water	water		1	!		
0-15	0-380	9851682	9851860	9747732		
0-30	0-760	9851690	9855785	9747740		
0-60	0-1500	9851704	9803432	9747758		
0-100	0-2500	9851810	9851879	9747766		
0-200	0-5000	9851828	9851887	9747775		
oz./	mm					
sq. in.	water					
0-10	0-440	9851771		,		
0-15	0-660	9851780				
0-20	0-880	9851798		1		
0-30	0-1320	9851747	9851917	. 1		
0-35	0-1540	9851801	9857273			
0-60 oz./	0-2640	9851755	9803548			
sq. in.	in. water			1		
0-20	0-34	9851720	9857281			
0-32	0-55	9851739	9855793	· i		
ressure Rar			3033733			
psi				-:		
3		9851925	9851836	9747783		
5		9851933	9851844	9747791		
Accessories		d)				
acessory prices do 25 pcs. for type 612.	not apply to a 20). Contact	rders of 50 pcs or r factory for guests	nore per line kem	1		
F, chrome pl		\$27.55	\$21.55	M/A		
brass		1327085	1327087	1		
F, black pain	ted	\$21.30	\$24.55	U/A !		
steel		1327089	1327091			
F, stainless s	teel		••	\$23.65		
, , ,				1327081		
estrictor, bra	ss		\$.90			
-			1326943			

ABBREVIATIONS LM - Lower Mount CBM - Center Back Mount FF - Front Flange

NA - Not Available

In keeping with and for perposes of product improvement, WIKA reserves the right to make design changes without prior nodes.

Prices subject to change without notice.
This price list supersodes price fiel dated 01/01/95.
Effective 03/01/95 or
Price Page PL95-20

Priocs: FOB Lawrencevillo, GA Terms: 30 days net

(subject to credit approval)

Warranty

REGARDLESS OF CAUSE, if a product you buy from this brochure does not work right, Gast will repair or replace it once, at no charge, for up to one year from the date of shipment from the factory. In the course of repair or replacement, Gast may send you written recommendations on how to prevent a problem from happening again. Gast reserves the right to withdraw this warranty if you do not follow these recommendations. Customer is responsible for freight charges both to and from Gast in all cases. This warranty does not apply to electric motors, electrical controls, and gasoline engines, which Gast obtains from other manufacturers. A motor or engine carries only the warranty of the company that makes it.

THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER WRITTEN, ORAL OR IMPLIED, INCLUDING THE WARRANTY OF MERCHANTABILITY AND OF FITNESS FOR ANY PARTICULAR PURPOSE. GAST'S LIABILITY IS IN ALL CASES LIMITED TO THE REPLACEMENT PRICE OF ITS PRODUCT. GAST SHALL NOT BE LIABLE FOR ANY OTHER DAMAGES, WHETHER CONSEQUENTIAL, INDIRECT, OR INCIDENTAL, ARISING FROM THE SALE OR USE OF ITS PRODUCTS.

Gast's sales personnel may modify this warranty, but only by signing a specific, written description of any modifications.

DISCLAIMER

The information presented in this catalog is based on technical data and test results of nominal units. It is believed to be accurate and is offered as an aid in the selection of Gast products. It is the user's responsibility to determine suitability of the product for his intended use and the user assumes all risk and liability whatsoever in connection therewith.

North American Representatives and Distributors

A substantial stock of vacuum pumps, compressors, air motors, parts and accessories are carried by the offices listed below.

- (A) Distributor-plant-use sales only.
- Manufacturers Representative O.E.M. and plant-use sales.
- Gast warehouse and sales office O.E.M. and plant-use sales.
- Gast service center.



3 Franklin Electrofluid Co., Inc. (B) 3854 Watman Memphis, TN 38118 Ph. 901/362-7504 Ph. 1-800-238-7500

Franklin Electrofluid Co., Inc. 8900 Crystal Hill Road North Little Rock, AR 72113 AR only 1-800-272-5665 Ph. 501/771-4170

Franklin Electrofluid Co., Inc. 5609 South 14th Street Ft. Smith, AR 72901 Ph. 501/646-7448 Ph. 1-800-264-7406

(B,D) 13824 Bentley Place Centios, CA 90701 Ph. 30/404-2721 & Ph. 71/421-6280 Ph. 1-800-843-5558

Brenner Fiedler & Assoc., Inc. San Diego, CA Ph. 619/232-9152 Ph. 1-800-843-5558

Brenner Fiedler & Assoc Inc. 2117 South 48th Street #102 Tempe, AZ 85282 Ph. 1-800-638-0394

5 TECO Pneumatic, Inc. (8) 1069 Serpentine Lane Pleasanton, CA 94566 Ph. 510/426-8500

6 Fiero Fluid Power, Inc. (B) Suite 104

10515 East 40th Ave Deriver, CO 80239 Ph. 303/373-2600

Fiero Fluid Power, Inc. (B) 2155 South Main Salt Lake City, UT 84115 Ph. 801/467-4622

(7) Ohlheiser Corp. 17 Rose Ave. West Hartford, CT 06133-0332 Connecticut only 203/953-7632 New England States 1-800-858-9368

8 Gast Mfg. Corp.
(C.D) Eastern Sales Office 505 Washington Ave. Carlstadt, NJ 07072 Ph. 201/933-8484 Ph. 212/563-1870 (NYC)

Dees Corp. (A) 8860 Kelso Dr. Baltimore, MD 21221 Ph. 410/574-2900

A-Matic, Inc. (A) 119 Brown St. Pittston (Wilkes-Barre), PA 18640

(A) 650 N. State St. York, PA 17403 Ph. 717/846-9300

Van-Air & Hydraulics, Inc. Ph. 215/923-2575

Van-Air & Hydraulics, Inc. 525 E. Woodlawn Ave. Maple Shade, NJ 08052 Ph. 609/779-7300



5

27

10 Gast Mich

(C) 755 N. Edgewood (12) D & F Distributors

6309 Ulrich Avenue Louisville, KY 40219 Ph. 502/968-0107 Ph. 1-800-45-PUMPS

D & F Distributors, Inc. 1144 Indy Court Evansville, IN 47711 Ph. 812/867-2441 h. 1-800-45-PUMPS

(3) John Henry Foster Co. Inc. (5) 4700 Lebourget Drive St. Louis, MO 63134-0820 Ph. 314/427-0600 Ph. 1-800-444-0522

(14) Isaacs Fluid Power Equipment Company (5) 8746 East 33rd Street Indianapolis, IN 46226 Ph. 317/898-3486

Isaacs Fluid Power Equipment Company Ft. Wayne, IN Ph. 219/747-9604

Isaacs Fluid Power Equipment Company 1023 E. Fourth St. Dayton, OH 45402 Ph. 513/228-7774

Isaacs Fluid Power Equipment Company vn D Cincinnati, OH 45237 Ph. 513/761-8855

Isaacs Fluid Power Equipment Company (B) 929 Eastwind Drive, Suite 205 Westerville, OH 43081 Ph. 614/895-8540

(15) Skarda Equipment Co., Inc. (8) 2563 Farnam Omaha, NE 68131 Ph. 1-800-228-9750 Ph. 402/422-0430

Skarda Equipment Co., Inc. 3545 Third Ave. Marion, IA 52302 Ph. 1-800-228-9750 Skarda Equipment Co., Inc.

Des Moines, IA Ph. 1-800-228-9750 Skarda Equipment Co., Inc.

(B) 10139 Kaw Dr. Edwardsville, KS 66113 Ph. 1-800-228-9750 Skanda Equipment Co., Inc. 313 N. Mathewson Wichita, KS 67214 Ph. 1-800-228-9750

16 D & L Pumps, Inc. 2845 Sharon Stre Kenner, LA 70062 Ph. 504/467-2490

William H. Nash Co., Inc (B) 23910 Freeway Park Drive Farmington Hills, MI 48335 Ph. 910/477-5800

William H. Nash Co., Inc. (B) 4134 36th Street S.E. Grand Rapids, MI 49512 Ph. 616/949-4900 William H. Nash Co., Inc. Flushing, MI Ph. 810/732-7272

(6)

18 Midwest Machine Tool Supply 230 Commerce Circle South Minneapolis, MN 55432 Ph. 612/571-3550 Ph. 1-800-327-9523

(9) Kinequip, Inc. (8) 365 Old Nagara Falls Blvd. Buffalo, NY 14228-1636 Ph. 716/694-5000 Kinequip, Inc. Johnstown, NY Ph. 1-800-982-8894

Kinequip, Inc. Rochester, NY Ph. 716/272-1590 Ph. 1-800-982-8894

Kinequip, Inc. Syracuse, NY 13211 Ph. 315/458-4115 Ph. 1-800-982-8894

(B) 11100 Park Charlotte Blvd. Charlotte, NC 28241 Ph. 704/588-3234

(21) RAF Fluid Power, Inc. (B) 23775 Mercantile Road Cleveland, OH 44122-5990 Ph. 216/464-8990

(B) 9912 B. East 45th Place Tulsa, OK 74146-4752 Ph. 918/663-6777 Ph. 1-800-658-1570

Southwestern Controls (B) 6720 Sands Point Houston, TX 77074 Ph. 713/777-2626 Ph. 1-800-444-9368

estern Controls (B) 8808 Sovereign Row Dallas, TX 75247 Ph. 214/638-4266 Ph. 1-800-444-9367

Southwestern Controls (B) 859 Isom Road San Antonio, TX 78216-4035 Ph. 210/340-4111

(24) Allegheny Fluid Power, Inc (B) 112 Douglas Road Sewickley, PA 15143 Ph. 412/367-5894

(5) Mesa Equipment & Supply Company (6) 3820 Commons, N.E. Albuquerque, NM 87109 Ph. 505/345-0284

Mesa Equipment & Supply Company 1342 Lomaland Drive El Paso, TX 79935 Ph. 915/594-1414

(8) 2420 Grenoble Road Richmond, VA 23294 Ph. 804/672-6501

34

10)

13)

(3

(14)

1

独(18)

B

C. A. Weaver Co., Inc. 7562 HI Tech Rd. Roanoke, VA 24019 Ph. 703/563-9761 C.A. Weaver Co., Inc.

2430 Alabama A Norfolk, VA 23513 Ph. 804/857-8700

(27) Air-Oil Products Corp (B) 6353 Sixth Ave. South Seattle, WA 98108-3437 Ph. 206/767-7750 Ph. 1-800-282-2672 Fax: 206/762-4736

Air-Oil Products Corp (B) 2400 E. Burnside St Portland OR 97214 Ph. 503/234-0666 Ph. 1-800-242-2672 Air-Oil Products Corp

(B) 865 Conger Street Eugene, OR 97401 Ph. 503/485-2022 Ph. 1-800-322-2672

(B) 3154 Gross St. Gross St. Gross St. 9354 Gross St.

Ph. 414/337-0234 Fluid System Components Inc. 2315 South 170th Street New Berlin, WI 53151-2701 Ph. 414/827-2700

29 J.E.M. Fluid Power, Inc.

(B) 2182 Dam Rd. West Branch, Mi 48661 Ph. 517/345-1180

(C) 2300 Highway M-139 (D) Benton Harbor, MI 49023-0097 Ph. 616/926-6171

91-060 Hanua Street Kapolei, Hawaii 96707-1777 Ph. 808/682-1541

(33) Garness Industries, Inc. (B) 6317 Nielson Way Anchorage, AK 99518 Ph. 907/562-2933

(34) CANADA ONTARIO Wainbee Ltd. Windsor Ph. 1-800-265-0929

Wainbee Ltd. 1590 Liverpool Court Ottawa, Ontario K1B 4L2 Ph. 613/744-1720

Wainbee Ltd. (A.D) 5789 Coopers Ave. Mississauga, Ontario L4Z 3S6 Ph. 905/568-1700 Fax: 905/568-0083

Wainbee Ltd. (B) Unit 14 65 Trillium Park Place Kitchener, Ont. N2E 1X1 Ph. 519/748-5391

O

8

20)

Wainbee Ltd. 1909 Oxford Street East, Unit 45 London, Ont. N5V 4L9 Ph. 519/451-6266 Fax: 519/451-5566 QUEBEC Wainbee Ltd.

(A,D) 215 Brunswick Blvd. Pointe Claire, P.Q. H9R 4R7 Ph. 514/697-8810 Wainbee Ltd.

1990 Quest Blvd. Charest Quebec City, P.Q. G1N 4K8 Ph. 418/683-1956

Wainbee I td (B) 1932 St. Paul Blvd Chicoutimi, P.O. G7K 1H2 Ph. 418/698-4884 BRITISH COLUMBIA

Wainbee 1 td (B) 2231 Vauxhall Place Richmond, B.C. V6V 1Z5 Ph. 604/278-4288 Ph. 1-800-663-9829 AI BERTA

Wainbee Ltd 10336 59th Avenue Edmonton, Alta, T6H 1E6 Ph. 403/434-9528

Wainbee Ltd. (B) 7407 44th St. S.E. Calgary, Alta, T2C 3C8 Ph. 403/236-1133 MANITOBA

Wainbee Ltd. (B) 1393 Border St. #4 Winnipeg, Man. R3H 0N1 Ph. 204/632-4558 Ph. 1-800-663-1393 MARTIME PROVINCES

Wainbee Ltd. 10 Thomhill Drive, Suite #5 Dartmouth, Nova Scotia Halifax B3B 1S1 Ph. 902/468-1787 Ph. 1-800-667-1787 SASKATOON

Wainbee, Ltd. 437 34th Street Saskatoon, Sask, SKS 0S9 Ph. 306/652-1433 NORTH BAY

Wainbee, Ltd. 1954 Main Street West North Bay, Ont. P1B 8K5 Ph. 705/472-4244



CONVERSION CHARTS



PRESSURE CONVERSION TABLE

Lbs. Per Sq. Inch	Atmospheres	Inches of Mercury	Millimeters of Mercury	Inches of Water	Meters of Water	Milli Bars	Kilopascals
1	.0680	2.036	51.71	27.73	.7037	69.0	6.895
14.70	1	29.92	760	407	10.33	1013.3	101.36
.4912	.0334	1	25.4	13.6	.3452	33.86	3.387
.0193	.001315	.03937	1	.5358	.0136	1.33	.13307
.0361	.00246	.0735	1.868	1	.0254	2.49	.24891
1.422	.0967	2.895	73.55	39.37	1	97.98	9.8047
14.50	.0009869	.02953	.750	.4018	.01021	1	.09998
.145	.00986	.29529	7.4996	4.0174	.10206	10.01	1

VOLUME FLOW CONVERSION TABLE

cfm	cfh	gpm	m³h	l/s
1	60	7.4805	1.6990	.47195
1/60	1	.12468	.02832	.007866
.13368	8.0208	1	22712	.06309
.58858	35.315	4.4029	1	1/3.6
2.1189	127.13	15.850	3.6	1

Power and Heat Flow Conversion Table

hp(U.S.)	ft.lb/min	Btu/hr	Btu/min	W	kcal/min
1	33000	2544.4	42.407	745.70	10.686
.000030303	1	.07710	.001285	.02260	.0003238
.0003930	12.969	1	1/60	.29307	.004200
.02358	778.17	60	1	17.584	.25200
.00134	44.254	3.4121	.05687	1	.01433
.09358	3088.0	238.10	3.9683	69.780	1

Temperature Conversion Chart

°C = % (°F -32) Absolute Kelvin = °C +273.15 °F = (%°C) +32 Rankine °F = +459.67

TABLE EXAMPLE:

To Convert 100 °C to °F look up 100 read left
To Convert 100 °F to °C look up to 100 read right

to °F	From	to °C	to °F	From	to °C	to °F	From	to °C
-148.0	-100	-73.33	+50.00	+10	-12.22	161.6	72	22.22
-130.0	-90	-67.78	+53.6	+12	-11.11	165.2	74	23.33
-112.0	-80	-62.22	+57.2	+14	-10.00	168.8	76	24.44
-94.0	-70	-56.67	+60.8	+16	-8.89	172.4	78	25.56
-76.0	-60	-51.11	+64.4	+18	-7.78	176.0	80	26.67
-58.0	-50	-45.56	+68.0	+20	-6.67	179.6	82	27.78
-40.0	-40	-40.00	+71.6	+22	-5.56	183.2	84	28.89
-36.4	-38	-38.89	+75.2	+24	-4.44	186.8	86	30.00
-32.8	-36	-37.78	+78.8	+26	-3.33	190.4	88	31.11
-29.2	-34	-36.67	+82.4	+28	-2.22	194.0	90	32.22
-25.6	-32	-35.56	+86.0	+30	-1.11	197.6	92	33.33
-22.0	-30	-34.44	+89.6	+32	0.00	201.2	94	34.44
-18.4	-28	-33.33	+93.2	+34	+1.11	204.8	96	35.56
-14.8	-26	-32.22	+96.8	+36	+2.22	208.4	98	36.67
-11.2	-24	-31.11	+100.4	+38	+3.33	212.0	100	37.78
-7.6	-22	-30.00	+104.0	+40	+4.44	230.0	110	43.33
-4.0	-20	-28.89	107.6	42	5.56	248.0	120	48.89
-0.4	-18	-27.78	111.2	44	6.67	266.0	130	54.44
+3.2	-16	-26.67	114.2	46	7.78	284.0	140	60.00
+6.8	-14	-25.56	118.4	48	8.89	302.0	150	65.56
+10.4	-12	-24.44	122.0	50	10.00	320.0	160	71.11
+14.0	-10	-23.33	125.6	52	11.11	338.0	170	76.67
+17.6	-8	-22.22	129.2	54	12.22	356.0	180	82.22
+21.2	-6	-21.11	132.8	56	13.33	374.0	190	87.78
+24.8	-4	-20.00	136.4	58	14.44	392.0	200	93.33
+28.4	-2	-18.89	140.0	60	15.56	410.0	210	98.89
+32.0	0	-17.78	143.6	62	16.67	428.0	220	104.44
+35.6	+2	-16.67	147.2	64	17.78	446.0	230	110.00
+39.2	+4	-15.56	150.8	66	18.89	464.0	240	115.56
+42.8	+6	-14.44	154.4	68	20.00	482.0	250	121.11
+46.4	+8	-13.33	158.0	70	21.11			

APPENDIX B

DATA COLLECTION SHEETS

DATA COLLECTION SHEET REGENERATIVE BLOWER SYSTEM FACILITY 6454 VANDENBERG AFB, CALIFORNIA

		,		 ,				
Checked by (initials)								
Comments								
Outlet Pressure (inches H ₂ O)								
Outlet Temperature (° F)								
Inlet Vacuum (inches H ₂ O)								
Blower Functioning Upon Arrival? (Y/N)								
Time								
Date								

DATA COLLECTION SHEET REGENERATIVE BLOWER SYSTEM FACILITY 6454 VANDENBERG AFB, CALIFORNIA

	 	·	 		,	 	 	 	
Checked by (initials)									
Comments									
Outlet Pressure (inches H ₂ O)									
Outlet Temperature (° F)									
Inlet Vacuum (inches H ₂ O)									
Blower Functioning Upon Arrival? (Y/N)									
Time									
Date									